


PD250-64 Flush Pull



Wear Safety Goggles

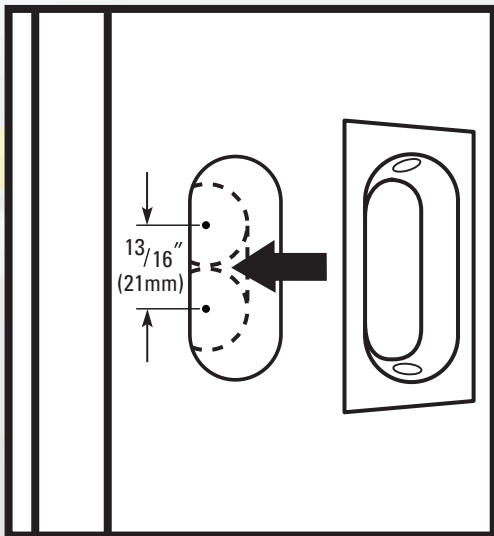

1. Mark screw locations.
 2. Drill two 1" (25mm) holes as shown 1/2" (13mm) deep.
 3. Chisel and slope ends to accommodate pull.
 4. Drill 3/32" pilot holes.
 5. Fasten screws.
- Only clean with soft cloth, mild soap and water.